


Start by cutting little pieces of tri-stock balsa that will fit into each corner.




Glue all the tri-stock as shown in the corners. Try to line up the top as flush as you can.

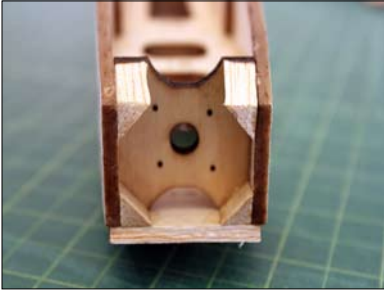

Just another view



Start by sanding the bottom round. Remember to only sand the very front part where the tri-stock is. Do not sand too much behind the motor mount.

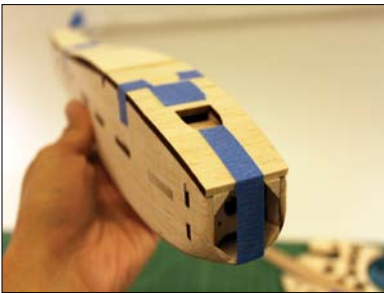

Using masking tape, cover the top sheet and leave the areas to be sanded exposed.



Sand the top portion round by sanding the corners. Again do not sand too much behind the motor mount area.

Remember, do NOT glue the top portion on. It needs to remain removable in order to install your electronics.

Continue with the rest of the instructions from this point...

